

vtech®

User's Manual

Challenger Laptop™



2005 © VTech


Printed in China

91-02136-000 (英)



Dear Parent,

We at *VTech* understand that a child's needs and abilities change as they grow and with that in mind we can develop our toys to teach and entertain at just the right level. Babies need toys that will stimulate their interest in different textures, sounds and colours, while on-the-go toddlers and pre-schoolers want more interactive toys to develop their imaginations and encourage their language development. As they progress to more challenging curriculum at school, *VTech* keeps pace with a wide variety of cool, aspirational and interesting computers for learning. Every toy is unique and helps your child develop in different ways for the best all-round learning.

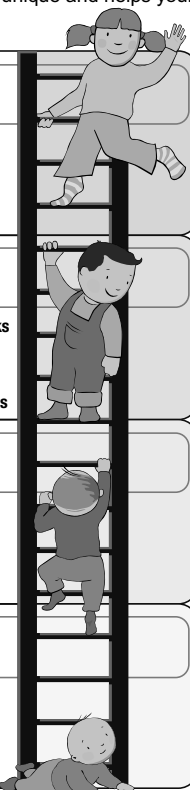


6-10 years	Electronic Learning Computers I need... <ul style="list-style-type: none">...challenging activities that can keep pace with my growing mind...cool stuff to keep me entertained, busy and up-to-date...intelligent technology that adapts to my level of learning...National Curriculum-based content to support school teaching...space to be flexible and creative and to find my own style
3-6 years	Ready, Set, School! I want... <ul style="list-style-type: none">...toys that let me pretend to be a grown-up so I can learn how the world works...to get ready for school by starting on the alphabet and counting...great games that keep me interested and make me laugh...my learning to be as fun and easy and exciting as can be...to show my creativity with drawing and music so my whole brain develops
6-36 months	SmartStart I can... <ul style="list-style-type: none">...start walking by myself and I'll want to explore!...understand what people say and begin to respond...fully interact with toys and use my own imagination...make my own discoveries and build on my knowledge...understand the world outside and learn more about it
0-12 months	SmartStart I am... <ul style="list-style-type: none">...gradually experiencing the world of colours, sounds and textures...exploring the world and learning through discoveries...responding to human voices more than any other sound...learning to move, touch, reach, grasp, hold, wiggle, sit up and crawl!...soothed by soft sensations and music, stimulated by bright colours

To learn more about *VTech* toys, visit www.vtechuk.com

INTRODUCTION

Thank you for buying the **VTech® Challenger Laptop™**. The **VTech® Challenger Laptop™** is your child's launch pad into a whole world of learning fun! In addition to language basics such as letters and vocabulary words, the **Challenger Laptop™** introduces French through fun, graphics-enhanced games. Your child will learn basic maths, sharpen logic skills and develop musical and artistic creativity - playing and having fun at the same time! Plus, the **Challenger Laptop™** is loaded with other cool features such as tools to store personal info, vivid animations, fun sound effects, snappy melodies and a realistic keyboard and mouse.

With the **Challenger Laptop™**, your child will find that learning and fun go hand in hand!

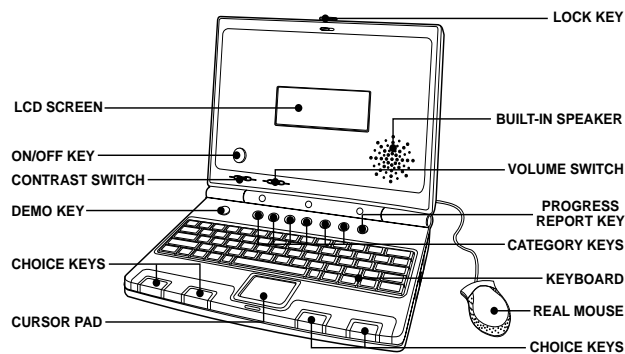

INCLUDED IN THIS PACKAGE

- **Challenger Laptop™**
- User's manual
- Real mouse
- Mouse mat

WARNING: All packing materials such as tape, plastic sheets, wire ties and tabs are not part of this toy and should be discarded for your child's safety.


GETTING STARTED

POWER SOURCE

The **Challenger Laptop™** operates on 3 “AA” size batteries (UM-3/LR6) or a **VTech®** 9V adaptor (sold separately).

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery covers on the bottom of the unit and open them.
3. Insert 3 new “AA” batteries (UM-3/LR6) as illustrated.

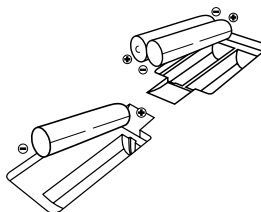

RECHARGEABLE BATTERIES ARE NOT RECOMMENDED.

4. Close the battery covers.

NOTE: For best performance, remove all factory-installed batteries and use new, alkaline batteries.

STANDARD FOR BATTERY TOYS

- Do not try to recharge non-rechargeable batteries;
- Rechargeable batteries are to be removed from the toy before being charged;
- Rechargeable batteries are only to be charged under adult supervision;
- Do not mix different types of batteries; Do not mix new and used batteries;
- Only use batteries of the recommended or equivalent type;
- Always insert batteries properly matching the plus (+) and minus (-) signs;
- Batteries that have run out of energy must be removed from the toy;
- Do not short-circuit the supply terminals;
- Do not use more batteries than recommended;
- Remove batteries from the toy if it will not be used for an extended period of time.

AC/DC ADAPTOR

Use a **VTech®** adaptor or any other standard adaptor that complies with EN61558 AC/DC 9V 300mA centre-positive adaptor.

Connecting the adaptor

1. Make sure the unit is **OFF**.
2. Locate the adaptor jack on the back of the unit.
3. Insert the adaptor plug into the unit's adaptor jack.
4. Plug the adaptor into a wall outlet.
5. Turn the unit **ON**.

NOTE: When the toy is not going to be in use for an extended period of time, unplug the adaptor.

Standard for toys with adaptor


- The toy is not intended for use by children under 3 years old.
- Only use the recommended adaptor with the toy.
- The adaptor is not a toy.
- Never clean a plugged-in toy with liquid.
- Never use more than 1 adaptor.
- Do not leave plugged-in for extended periods of time.

Notice to parents

Regularly examine the adaptor, checking for damage to the cord, plug, transformer or other parts. Do not use the adaptor if there is any damage to it.

REAL MOUSE

Use the mouse only on a clean, flat surface, so that the roller ball is not damaged and the cursor moves freely across the screen. Use only a mouse that is compatible with **VTech®** products.

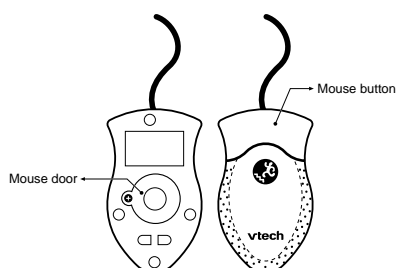

CONNECTING THE MOUSE

1. Make sure the unit is **OFF**.
2. Locate the mouse jack on the back of the unit.
3. Plug the mouse into the mouse jack.



USING THE MOUSE

1. Move the mouse in the direction you want the cursor to move.
2. Click on the mouse button to make a selection.

CLEANING THE MOUSE

1. Following the arrows, use a screwdriver to open the cover on the bottom of the mouse.
2. Take the ball out of the mouse and use a dry cloth to clean the mouse and the ball.
3. Place the ball back into the mouse, place the cover back onto the mouse and screw the cover closed.



PRODUCT FEATURES

ON/OFF BUTTON

Turn your **Challenger Laptop™** learning toy by pressing the On/Off button. You can turn the unit off by pressing the On/Off button again.

PLAY MODES

In the **Challenger Laptop™**, you can choose from 6 different categories of play and learning:

1. Language Lab (French)
2. Word Zone
3. Maths Mania
4. Game Time
5. Creative Studio
6. My Tools

LEVEL SELECTION



Pressing the Level key will change the level of the current activity from level one to level two and then level three. Press it again to go back to level one. Level one will be the default setting when entering a new activity.

CONTRAST SWITCH

Adjust the image on the screen by sliding the Contrast Switch to the right for higher contrast and to the left for lower contrast.



VOLUME SWITCH

Adjust the volume by sliding the Volume Switch to the right for higher volume and to the left for lower volume.

ONE/TWO MODE

Press the “Player” key on the keyboard to switch between One Player and Two Player modes. The activities that will be played in Two Player mode are:


- Word Train
- Talk Show
- Typing Fun
- Mouse’s Lunch
- Subtract it
- Show Time
- Costume Ball
- Hide and Seek
- Animal Shadows
- Carrot Patch

SCREEN SAVERS

Pressing the Screen Saver key allows you to select 1 of 3 screen savers which displays after a few minutes without input.

KEYBOARD LAYOUT

Your **Challenger Laptop™** has a full alphanumeric keyboard that doubles as a music keyboard.

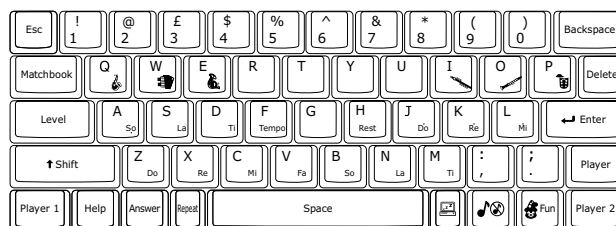

FUNCTION KEYS:



1. Demo key: to show a short demonstration of the product.



2. Progress Report key: to review the accuracy of your answers in most of activities.

3. Category keys: Press one of these buttons to jump to the first activity of that category.



4. Esc key: Press the Esc key to exit from the current activity and go to the previous screen.



5. Matchbook key: to enter the Matchbook activity directly.

6. Choice keys: Press these to answer the question in the Matchbook activity. These buttons can also be used to answer questions in some other activities.



7. Level key: to change the level in most activities.



8. Repeat key: to repeat current question or instruction.



9. Help key: to provide help in most activities.



10. Answer key: for the correct answer in most activities.



11. Delete key: to delete the input.



12. Fun key: for several random funny cartoons.



13. Background Music key: to stop or play the background music.



14. Screensaver key: to change the screensaver you'd like. Each time the button is pressed the screensaver will cycle to the next option.





15. Player key: to switch between One Player and Two Player modes.



16. Player 1/Player 2 key: Press these keys to enter different players' answers in Two Player mode.




17. Cursor Pad: to cycle the choices in the main menu or the questions in an activity.

18. Letter keys: to input your answer in letter-related activities.



19. Number keys: to input numbers in the related activities.

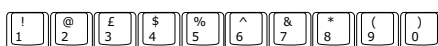

20. Musical note keys: to input your own melody in Melody Maker activity..




21. Instrument keys: to change the main instrument in the music-related activities.




22. Tempo key: to change the melody tempo in the music-related activities.

HOW TO PLAY

Pressing the  key to turn on the unit, followed by the main



menu, where an activity can be selected to play. Pressing the  key again will turn the unit off.

ACTIVITY SELECTION

When the unit is turned on and the opening sequence has been displayed, you will be taken to the main menu where activities can be selected by:

- 1) pressing **Enter** at the chosen activity while they cycle through automatically;
- 2) using the cursor pad to cycle through the activities manually and making a selection with the **Enter** key;
- 3) clicking the mouse button at the desired activity;
- 4) typing the activity number and selecting with the **Enter** key

If a category key (such as 'Word Zone') is pressed, the menu will jump to the first activity of that category. Individual activities can then be selected using the same methods previously described.

AI FEATURE

If a question is answered incorrectly during the first round, up to 3 of those questions will be asked again in subsequent rounds of most activities. This feature is designed to help children find the correct answer by using their memory.

ANSWER

The answer will be provided after a certain number of tries in most question activities. It will not be available in Earful of Numbers, Picture Fun, Chat Room, Alphabet Apple, Number Bubbles, Typing Fun, Firefly Count, Carrot Patch and all activities in the Creative Studio and My Tools category.

SHORT BREAK MODE

After 5 rounds are played consecutively, you'll enjoy a wonderful display of dancing to music!

AUTO POWER OFF

To preserve battery power, the **Challenger Laptop™** will automatically shut off after several minutes without input. The unit can be turned on again by pressing the **On/Off** key.



ACTIVITIES

Your **Challenger Laptop™** includes a total of 40 activities.

Index	Activity Name	Category Name
1.	Earful of Numbers	1. Language Lab (French)
2.	Number Votes	
3.	Picture Fun	
4.	Word Train	
5.	Letter Jump	
6.	Mouse's Snack	
7.	Chat Room	
8.	Talk Show	
9.	Alphabet Apple	2. Word Zone
10.	Letter Disks	
11.	Alphabet Fishing	
12.	Letter Match	
13.	Letter Bubbles	
14.	Typing Fun	
15.	Animal Votes	
16.	Mouse's Lunch	
17.	Odd One Out	3. Maths Mania
18.	Part and Whole	
19.	Number Star	
20.	Firefly Count	
21.	Kick One Out	
22.	Number Seesaw	
23.	Maths Votes	
24.	Mouse's Dinner	
25.	Shopping Spree	4. Game Time
26.	Subtract It	
27.	Tick-tock Time	
28.	Show Time	
29.	Costume Ball	5. Creative Studio
30.	Hide and Seek	
31.	Animal Shadows	
32.	Carrot Patch	
33.	Stamp Factory	
34.	Party Face	



35.	Concert Master	6. My Tools
36.	Melody Maker	
37.	About Me	
38.	My Favourites	
39.	Parents' Message	
40.	Matchbook	

LANGUAGE LAB (FRENCH)

01. EARFUL OF NUMBERS

Several disks marked with different numbers (from 1 to 10) will appear. Select a number disk by navigating with the cursor pad and pressing Enter, pressing the Choice keys or directly clicking it with the mouse to learn the French number word.



02. NUMBER VOTES



Do you want to vote in an election? In this activity, you can! A French number word will appear with 4 multiple choices. Vote for one to match the word using the mouse, choice keys or the cursor pad and Enter.

03. PICTURE FUN

Do you like taking pictures? Select a French word to see its picture and hear it spoken.



04. WORD TRAIN



A word will be shown on screen then several pictures will be shown one by one on a moving train. Find one picture that corresponds to the given French word!


05. LETTER JUMP

Select with the cursor pad, click the letter with the mouse or input the letter on the keyboard to help the frog jump to the right lily pad and find the beginning letter of the given French word!





06. MOUSE'S SNACK

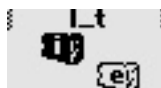

Look! A little hungry mouse is running to find its snack! Click one letter cheese or input the correct letter on the keyboard to complete the given French word and feed the mouse!

07. CHAT ROOM

Select a picture to learn its French greeting phrase!

08. TALK SHOW



Wouldn't it be exciting to be a star in a talk show! Match the French word or phrase with the correct picture by using the mouse, or the cursor pad and Enter key. Have a try!

WORD ZONE

09. ALPHABET APPLE

Some alphabet apples are falling from the tree. To pick a letter apple, press the letter key or cursor pad.



10. LETTER DISKS



Click on a letter disk to hear its name and then find a letter to match the sound!

11. ALPHABET FISHING

Several letter fish are swimming in the river. Go fishing by using the cursor pad, mouse, Choice keys or directly input the letters on the keyboard to arrange the letters in alphabetical order!



12. LETTER MATCH



Several pairs of letter cards will display on the screen. Pair up the capital letter with the small letter using the cursor pad or mouse.




13. LETTER BUBBLES

Children like catching bubbles, right?! Help to catch one letter to form the letter sequence with the mouse or by pressing the letter 19 on the keyboard before the time runs out!



14. TYPING FUN

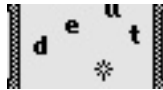


Type as many letters as you can by pressing the letters on the keyboard!

15. ANIMAL VOTES

The animal election is reaching fever pitch! The screen will display a word with its beginning letter missing. Vote for one letter from 4 multiple choices to complete the word.



16. MOUSE'S LUNCH

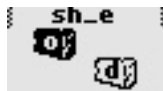

Look! A little hungry mouse is running to find its food for lunch! Click one letter cheese or input the correct letter on the keyboard to complete the given word and feed the mouse!

17. ODD ONE OUT

Find the odd one out of the group of words by using the mouse or the cursor pad and Enter.



18. PART AND WHOLE



Match the given "whole" word with a "part" word by using the mouse or the cursor pad and Enter.



MATHS MANIA

19. NUMBER STAR



Wow, there are so many stars twinkling in the sky! Press the number keys on the keyboard to catch one! The number star will be identified and then fly away like a shooting star! Make a wish...

20. FIREFLY COUNT

Children like catching the flying fireflies! Catch them as fast as possible using the cursor pad or mouse before the time runs out.



21. KICK ONE OUT



Two number bugs will appear out of the holes. Hit the odd one so that another number will fill in the number order!

22. NUMBER SEESAW

Come to the playground for seesaw fun! Try to keep the two sides balanced by adding the objects. Let's go!



23. MATHS VOTES



It would be great to vote in a maths election! Vote for one number or shape from 4 multiple choices to complete the number/shape sequence.

24. MOUSE'S DINNER

Look! A little hungry mouse is running to find its food for dinner! Click one number cheese to find out the bigger or smaller number according to the given instruction.





25. SHOPPING SPREE



Let's go shopping! First, pick something you'd like to add to the shopping cart, then pay by using the arrow keys or mouse to select the coins!

26. SUBTRACT IT

Use the cursor pad, mouse or press the number on the keyboard to help the frog jump to the correct number lily pad to answer the question.



27. TICK-TOCK TIME




Use the cursor pad or mouse to select the correct clock that matches with the given time.

GAME TIME

28. SHOW TIME

Wow, it's show time! Use the cursor pad or mouse to select appropriate clothing and accessories to dress the model for a professional show!

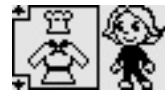


29. COSTUME BALL



All the animals are dressing up for a fancy ball! They will dance with different masks during the ball. Can you recognise them and find their true face from the multiple choices using the mouse or cursor pad? Come on!

30. HIDE AND SEEK

A mouse and a cat are playing a game! Remember where the mouse hides and help the cat to find it!

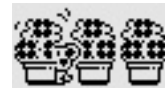



31. ANIMAL SHADOWS

During the night, many animals go out searching for food. Under the moonlight, look at the animal's shadows! Can you guess what they are? Scroll through the choices one by one to find the real animal! Come and have a try!



32. CARROT PATCH



Rabbits love carrots! The carrots keep going up and down. Use the cursor pad or the choice keys to help the rabbit pick as many carrots for his basket as you can within the time limit!

CREATIVE STUDIO

33. STAMP FACTORY

Select one style of stamps and drag your mouse to stamp it anywhere you like!



34. PARTY FACE



Help your friends dress up for your birthday party! Use the mouse to drag different styles of eyes, mouths, hair and other party stuff onto the face or head to create the party costume.

35. CONCERT MASTER

Wow, there's a music concert tonight! Come to our concert and be the conductor! Press 1 to 9 number keys to select a melody and then use the cursor pad to change the melody's main instrument for fun results!



Melody List:

Baa, Baa, Black Sheep
Oh My Darlin'
Frere Jacques
Camptown Races



Goosey Goosey Gander
Hickory Dickory Dock
If You're Happy and You Know it
London Bridge
Polly Wolly Doodle

36. MELODY MAKER



Do you want to be a music genius? Compose your own melodies by pressing the musical note keys. Press the Enter to hear the song created. You can press the instrument key to change the melody's instrument. Watch the chicks enjoy your musical creations!

MY TOOLS

37. ABOUT ME

Type information about yourself: your name, your birthday, your address, phone number, email address, your best friend's name and your interests.

NAME	
BIRTHDAY	
ADDRESS	
PHONE NUMBER	
EMAIL ADDRESS	
BEST FRIEND'S NAME	
INTERESTS	

38. MY FAVOURITES




Fill in or select your favourites: food, toy, animal, season, cartoon star and friends.

39. PARENTS' MESSAGE

Perhaps your dad or mum wants to leave a message for you. Invite them to type whatever they like!



40. MATCHBOOK

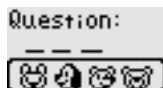

Input the code of the book and the question code will be shown automatically. Press the cursor pad and Enter, click the mouse or press the Choice keys to select your answer from 4 multiple choices that match up to the colours shown in the book.



CARE & MAINTENANCE

1. Keep your **Challenger Laptop™** clean by wiping it with a slightly damp cloth. Never use solvents or abrasives.
2. Keep it out of direct sunlight and away from direct sources of heat.
3. Remove the batteries when not using it for an extended period of time.
4. Avoid dropping it. Never try to dismantle it.
5. Always keep the **Challenger Laptop™** away from water.

TROUBLESHOOTING

When I press the On/Off button, nothing happens...

Make sure the On/Off button is turned on and your unit is plugged in. If you are using batteries, check to see that they are aligned correctly.

My screen keeps on freezing, and is not responding to my input. Or the sound becomes weak...

Turn the unit **OFF** for 15 seconds and then turn it on. If you are using an adaptor, unplug it for 15 seconds. Then plug the adaptor back in and turn the unit **ON**. If the problem persists, it may be the result of a low battery or faulty wiring in the adaptor. Replace the battery or use a different adaptor.

STILL HAVING PROBLEMS? / TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you. Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number. (The model number is typically located on the back or bottom of your product.)
- The actual error message or problem you are receiving.
- The actions you took right before the error message or problem.

Internet : www.vtechuk.com

Phone : 01235 546810 (from UK) or +44 1235 546810 (outside UK)





OTHER INFO

DISCLAIMER AND LIMITATION OF LIABILITY

VTech® Electronics Europe PLC and its suppliers assume no responsibility for any damage or loss resulting from the use of this notebook. **VTech® Electronics Europe PLC** and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. **VTech® Electronics Europe PLC** and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs.

COMPANY : VTech® Electronics Europe PLC

ADDRESS : Napier Court, Abingdon Science Park, Abingdon, Oxfordshire OX14 3YT.

TEL NO. : 01235 546810 (from UK) or +44 1235 546810 (outside UK)

COPYRIGHT NOTICES:

Copyright© 2005 **VTech®** Electronics Europe PLC All Rights Reserved. **VTech®** and the **VTech®** logo are registered trademarks of **VTech® Challenger Laptop™** is trademark of **VTech®** Electronics Europe PLC All other trademarks are property of their respective owners.



vtech®

PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Didcot, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

© 2005 VTech
Printed in China



To win a fantastic prize, join the VTech club online at www.vtechuk.com

